


CHEVY SMALL BLOCK PULLEY & BRACKET KITS

Passenger Side Mid Mount Long Water Pump Serpentine

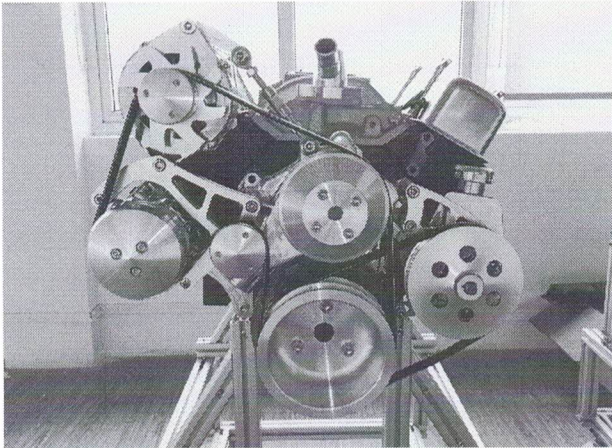

*Belt, Alt. Nut, P/S Key is not included.

Kits Includes:

- 1.Crank Pulley
- 2.Water Pump Pulley
- 3.Alt. Pulley with Fan and Nose Cover
- 4.Alt./Air Conditioner Brackets and Idler Kits
- 5.P/S Pulley with Brackets
- 6.Mounting Hardware

Pack details:

Pack -101

-101801 P/S Pulley	x1
-101515 P/S Alu Bracket	x1
-101516 Steel Bracket Rear	x1
-101517 Steel Bracket Front	x1
-102502-A38.6 38.6mm Spacer	x2
-102504-A5 Spacer	x1
-102503-7.6 Spacer	x3
-102503-10.2 Spacer	x1
-3/8"-16 x 3/4" SHCS	x3
-3/8"-16 x 1" SHCS	x2
-3/8"-16 x 1-1/4" SHCS	x1
-3/8"-16 x 4" SHCS	x2

Pack -102

-101812 Idler with Cover	x1
-102831 A/C Cover	x1
-1/4"-20 x 3/4" SHCS	x3
-8-32 x 3/8" SHCS	x3
-3/8"-16 x 2-1/4" Hex Bolt	x1
-3/8" Flat Washer	x1

Pack -103

-101536 Alt. A/C Bracket	x1
-101537 A/C Small Bracket	x1
-101512 Alt. Small Bracket	x1
-102500 Adjust Set	x1
-102502-A85 85mm Spacer	x1
-102504-A19 19mm Spacer	x1
-102504-A13.3 13.3m Spacer	x2
-5/16"-18 x 3/4" SHCS	x1
-3/8"-16 x 3/4" SHCS	x1
-3/8"-16 x 1" SHCS	x1
-3/8"-16 x 1-1/4" SHCS	x2
-3/8"-16 x 1-3/4" SHCS	x3
-3/8"-16 x 6" SHCS	x1
-M8 x 20 SHCS	x2
-M8 x 35 SHCS	x1
-M8 Flange Nut	x1

Pack -104

-101606 Crank Pulley	x1
-101701 Water Pump Pulley	x1
-101803 Alt. Pulley with cover	x1
-101818 Alt. Fan	x1
-5/16"-24 x 3/4" SHCS	x4
-3/8"-24 x 1" SHCS	x3
-8-32 x 3/8" SHCS	x3
-3/8" Flat Washer	x3
-3/8" Spring Washer	x3

***Please use LOCTITE in installation!**

Mounting Instructions

